

# INDEX

Subject	Page No.	Subject	Page No.
<b>A</b>		<b>B</b>	
Accessories—All Series . . . . .	150-10	Back-Up light Switch . . . . .	120-19
Adding Oil to Air Conditioner . . . . .	13-15	Balance, Wheel and Tire . . . . .	100-3
Air Cleaner . . . . .	00-20	Ball Joint	
Air Cleaner Description . . . . .	64-8	43-44000 Series . . . . .	30-11
Air Conditioning:		45 through 49000 Series . . . . .	30-28
Refrigerant Components		Battery	
Trouble Diagnosis . . . . .	13-3	Specifications . . . . .	120-13
Description and Operation . . . . .	13-6	Testing . . . . .	120-4
Adjustments and Minor Service . . . . .	13-12	Charging . . . . .	120-9
Removal and Installation . . . . .	13-16	Trouble Diagnosis . . . . .	120-3
Overhaul and Major Service . . . . .	13-19	Battery Test 421 . . . . .	120-4
Specifications . . . . .	13-37	Belt Tensions	
Heater Air-Conditioning System		L-6 Engine . . . . .	60-11
43-44000 Series . . . . .		350, 455 Engines . . . . .	60-56
Trouble Diagnosis . . . . .	13-56	Body	
Description and Operation . . . . .	13-58	Lubrication Points . . . . .	00-19
Adjustments and Minor Service . . . . .	13-60	Name Plate . . . . .	00-13
Removal and Installation . . . . .	13-60	Style Numbers . . . . .	00-10
Heater Air-Conditioning System		Bolt Torque Specifications	
45-46-48-49000 Series . . . . .		L-6 Engine . . . . .	60-37
Trouble Diagnosis . . . . .	13-70	350, 450 Engines . . . . .	60-84
Description and Operation . . . . .	13-71	Turbo Hydramatic 350 . . . . .	75-117
Adjustments and Minor Service . . . . .	13-73	Turbo Hydramatic 400 . . . . .	76-127
Removal and Installation . . . . .	13-73	43-44000 Series 3-Speed Manual . . . . .	72-17
Automatic Climate Control Heater		3-Speed Manual 45-46000 and	
Air-Conditioner System 45-46-48-49000		Estate Wagon . . . . .	72-51
Series:		4-Speed Manual 43-44000 Series . . . . .	72-32
Trouble Diagnosis . . . . .	13-92	43-44-45000 Series Clutch . . . . .	71-15
Description and Operation . . . . .	13-99	Brakes	
Adjustments and Minor Service . . . . .	13-105	Drum Brake, Parking Brake, Wheel	
Air Conditioner Wiring Diagrams . . . . .	120-127	Cylinder and Master Cylinder -	
Alignment		All Series	
Front Wheel		Trouble Diagnosis . . . . .	50-3
43-44000 Series . . . . .	30-7 and 30-18	Description of Brake Mechanism . . . . .	50-5
45 through 49000 Series . . . . .	30-24 and 30-36	Operation of Brake Mechanism . . . . .	50-7
AM-FM Radio . . . . .	129-5	Adjustments and Minor Service . . . . .	50-8
Antenna Trimmer		Overhaul and Major Service . . . . .	50-14
Adjustment—Radio . . . . .	129-6	Specifications . . . . .	50-19
Assembly of Transmission from Major Units		Single Piston Disc Brake-All Series	
Turbo Hydramatic 350 . . . . .	75-94	Trouble Diagnosis . . . . .	50-33
Turbo Hydramatic 400 . . . . .	76-110	Description . . . . .	50-35
Automatic Climate Control		Operation . . . . .	50-37
Wiring Diagrams		Adjustments and Minor Service . . . . .	50-38
45-46-48-49000 Series . . . . .	120-128	Overhaul and Major Service . . . . .	50-43
Automatic Level Control . . . . .	40-14	Specifications . . . . .	50-46
Axle, Rear-All Series		Tandem Power Brake Unit	
Trouble Diagnosis . . . . .	40-55	Trouble Diagnosis . . . . .	50-48
Description and Operation . . . . .	40-60	Description . . . . .	50-50
Removal and Installation . . . . .	40-63	Operation . . . . .	50-51
Overhaul and Major Service . . . . .	40-66	Removal and Installation . . . . .	50-55
Specifications . . . . .	40-77	Overhaul and Major Service . . . . .	50-56

Subject	Page No.	Subject	Page No.
Specifications . . . . .	50-66	Condenser Removal and Installation . . . . .	13-17
Delco Moraine Power Brake Unit- Drum Brakes 43-44000 Series		Connecting Rod and Bearings	
Trouble Diagnosis . . . . .	50-70	L-6 Engine . . . . .	60-22
Description . . . . .	50-71	350, 455 Engines . . . . .	60-68
Operation . . . . .	50-71	Control Arm Front	
Removal and Installation . . . . .	50-74	Upper	
Overhaul and Major Service . . . . .	50-75	43-44000 Series . . . . .	30-14
Specifications . . . . .	50-83	45 through 49000 Series . . . . .	30-30
Bumpers, Front and Rear		Lower	
43-44000 Series . . . . .	140-2	43-44000 Series . . . . .	30-14
45-46-48000 Series . . . . .	140-8	45 through 49000 Series . . . . .	30-31
49000 Series . . . . .	140-15	Controlled Combustion System . . . . .	67-2
<b>C</b>			
Camshaft and Bearings		Center Support	
350, 455 Engines . . . . .	60-80	Turbo Hydramatic 400 . . . . .	76-104
Car Model Identification . . . . .	00-10	Converter Checking Procedure	
Carburetor—See Rochester MV, 2GV or 4MV		Turbo Hydramatic 350 . . . . .	75-109
Charging System-All Except		Turbo Hydramatic 400 . . . . .	76-109
49000 Series		Coolant Flow	
Specifications . . . . .	68-45	L-6 Engine . . . . .	60-7
Operation . . . . .	68-37	350, 455 Engines . . . . .	60-53
Trouble Diagnosis . . . . .	68-35	Crankcase Ventilator—See P.C.V.	
Testing . . . . .	68-36	Cranking System—See Starting System	
Wiring Diagram . . . . .	68-46	Crankshaft	
Charging System 49000 Series		L-6 Engine . . . . .	60-23
Specifications . . . . .	68-56	350, 455 Engines . . . . .	60-69
Operation . . . . .	68-50	Cruise Control (Cruise Master) . . . . .	65-2
Trouble Diagnosis . . . . .	68-48	Operation . . . . .	65-3
Testing . . . . .	68-52	Wiring Diagram	
Wiring Diagram . . . . .	68-57	43-44000 Series . . . . .	65-8
Charts Lubrication . . . . .	00-22	45, 46, 48 & 49000 Series . . . . .	65-9
Chassis Sheet Metal		Trouble Diagnosis Chart . . . . .	65-3
43-44000 Series . . . . .	110-2	Electric—Vacuum Diagram . . . . .	65-10
45-46-48000 Series . . . . .	110-14	Cylinder Head	
49000 Series . . . . .	110-31	L-6 Engine . . . . .	60-14
Chassis Springs, Front		350, 455 Engines . . . . .	60-59
43-44000 Series . . . . .	30-15	350, 455 Engines . . . . .	60-66
45 through 49000 Series . . . . .	30-31	Oil Viscosity Chart . . . . .	00-16
Clock . . . . .	120-91	Specifications	
Closed P.C.V. System . . . . .	64-9	L-6 Engine . . . . .	60-37
Clutch Driven Plate Alignment . . . . .	71-5	350, 455 Engines . . . . .	60-84
Clutch Lash Adjustment . . . . .	71-5	Torque Specifications	
Clutch Start Switch . . . . .	120-19	L-6 Engine . . . . .	60-37
Compressor Clutch, Drive Plate, and Shaft Seal Disassembly and Reassembly . . . . .	13-19	350, 455 Engines . . . . .	60-84
Compressor Disassembly and Reassembly . . . . .	13-24	Tune-Up . . . . .	69-2
Compressor Pulley and Coil and Housing Assemblies—Disc—Disassembly and Reassembly . . . . .	13-22	Evacuate and Charge Air Conditioner . . . . .	13-12
Compressor Removal and Installation . . . . .	13-16	Evaporative Control System . . . . .	80-3
		Evaporator Removal and Installation . . . . .	13-18
		Exhaust System	
		Description . . . . .	80-23
		Removal and Installation . . . . .	80-23
		Information Drawings . . . . .	80-25
		Expansion Valve Removal and Installation . . . . .	13 17
		External Oil Leaks—Transmission	
		Turbo Hydramatic 350 . . . . .	75-4
		Turbo Hydramatic 400 . . . . .	76-4

Subject	Page No.	Subject	Page No.
<b>F</b>			
Fan Clutch		Distributor	
L-6 Engine	60-7	Specifications	68-32
350, 455 Engines	60-54	Point Replacement	68-24
Fast Idle Adjustment	64-6	Dome and Panel Light Wiring Diagrams	
Fender, Front		43-44000	120-34
43-44000 Series	110-3	Drill Size Chart	Precedes Index
45-46-48000 Series	110-15		
49000 Series	110-32	<b>E</b>	
Filter—Engine Oil	00-17	Electrically Heated Rear Window	120-137
Fluid Checking Procedure—Transmission		Engine	
Turbo Hydramatic 350	75-118	Cooling System	
Turbo Hydramatic 400	76-123	L-6 Engine	60-10
Flushing Air Conditioner	13-15	350, 455 Engines	60-55
Forward Clutch		General Description	
Turbo Hydramatic 350	75-87	L-6 Engine	60-5
Turbo Hydramatic 400	76-92	350, 455 Engines	60-49
Frame and Body Mounts		Lubrication System—L-6 Engine	60-7
43-44000 Series	20-2	350, 455 Engines	60-51
45-46-48-49000 Series	20-8	Mountings	
Front Servo		L-6 Engine	60-34
Turbo Hydramatic 400	76-84	350, 455 Engines	60-82
Front Suspension		Oil Change Interval	00-15
43-44000 Series	30-2	Oil Pan—R. & R.	
45 through 49000 Series	30-21	45 through 49000 Series	30-24 and 30-36
Front Wheel Alignment		Front Wheel Bearing Adjustment	
43-44000 Series	30-7 and 30-18	All Series	30-10
<b>D</b>			
Dash Pot Adjustment	64-5	Fuel Filter Description	64-9
Decimal Equivalent Chart	Precedes Index	Fuel Gauge	
Delcotron—See Generator		Operation	120-91
Description		Wiring Drawing	120-88
Turbo Hydramatic 350	75-23	Trouble Diagnosis	120-80
Turbo Hydramatic 400	76-25	Fuel Pump Operation	64-22
43-44000—3 Speed Manual	72-5	Fuel Pump Test	64-22
3-Speed 45-46000 and Estate Wagon	74-40	Fuel System	
4-Speed Manual 43-44000	72-23	Description	80-3
43-44-45-46000 Series Clutch	71-5	Information Drawings	80-6
Detonation Complaints	64-4	Tank Removal	80-4
Differential—All Series		Tank Gauge Unit Removal	80-4
Trouble Diagnosis	40-55	Functions of Valves and Hydraulic	
Description and Operation	40-60	Control Units	
Removal and Installation	40-63	Turbo Hydramatic 350	75-23
Overhaul and Major Service	40-66	Turbo Hydramatic 400	76-25
Specifications	40-77	Fuse Block	120-94
Direction Signal—See Turn Signal		Fuse Chart	120-12
Disassembly of manual Transmission		Fusible Link	120-8
43-44000	72-5	<b>G</b>	
3-Speed 45-46000 and Estate Wagon	72-42	Gas Mileage Complaints	64-4
4-Speed Manual 43-44000 Series	72-23	Gas Tank—See Fuel Tank	
Discharging Air Conditioner	13-13	General Specifications	
		L-6 Engine	60-37

Subject	Page No.
350, 455 Engines .....	60-84
Turbo Hydramatic 350 .....	75-117
Turbo Hydramatic 400 .....	76-127
43-44000 Series	
3-Speed Manual .....	72-17
3-Speed 45-46000 and Estate Wagon .....	72-51
4 Speed Manual 43 44000 .....	72-32
45-46000 Series Clutch .....	71-15
Generator	
Specifications .....	68-45
Description .....	68-37
Repair .....	68-40
Testing .....	68-36
Governor Driven Gear	
Turbo Hydramatic 400 .....	76-82
Grille, Radiator	
43-44000 Series .....	130-2
45-46-48000 Series .....	130-7
49000 Series .....	130-12
Guide-Matic .....	150 2

## H

Hard Starting .....	64-3
Hazard Warning Flasher	
Description .....	120-42
Trouble Diagnosis .....	120-39
Wiring Diagram .....	120-44
Headlamp Aiming .....	120-22
Headlight Switch .....	120-18 and 120-27
Heater Assembly Removal and Installation	
43-44000 Series .....	12-8
45-46-48000 Series .....	12-16
49000 Series .....	12-24
Heater Control Assembly Removal And Installation	
43-44000 Series .....	12-8
45-46-48-49000 Series .....	12-17
Heater Control Adjustment	
43-44000 Series .....	12-6
45-46-48-49000 Series .....	12-17
Heater Description	
43-44000 Series .....	12-4
45-46-48-49000 Series .....	12-15
Heater Specifications	
43-44000 Series .....	12-9
45-46-48-49000 Series .....	12-18
Heater System Trouble Diagnosis	
43-44000 Series .....	12-2
45-46-48-49000 Series .....	12-15
Horn	
Operation .....	120-41
Adjustment .....	120-39

Subject	Page No.
Hydraulic Operation	
Turbo Hydramatic 350 .....	75-25
Turbo Hydramatic 400 .....	76-25
Hydraulic Valve Lifter	
L-6 Engine .....	60-17
350, 455 Engines .....	60-63

## I

Identification Number Vehicle .....	00-13
Idle Adjustment .....	64-6
Detent Switch Adjustments	
Turbo Hydramatic 400 .....	76-53
Detent Cable Adjustment	
Turbo Hydramatic 350 .....	75-53
Inflation Pressures, Tires .....	100-14
Ignition Coil	
Specifications .....	68-32
Testing .....	68-16
Ignition, Starter Wiring Diagram .....	68-33
Ignition System	
Timing .....	68-26
Description .....	68-18
Trouble Diagnosis .....	68-16
Indicator Light Wiring Diagram .....	120-77
Indicator Light Trouble Diagnosis Chart	
43-44000 .....	120-48
45-46-48000 .....	120-62
Instrument Panel Information Drawings	
43-44000 .....	120-53
45-46-48-49000 .....	120-70
Instrument Panel Parts Removal	
43-44000 Series .....	120-50
45-46-48-49000 Series .....	120-64
Intake Manifold	
L-6 Engine .....	60-13
350, 455 Engines .....	60-58
Intermediate Clutch	
Turbo Hydramatic 350 .....	75-66
Turbo Hydramatic 400 .....	76-67

## J

Joint, Ball	
43-44000 Series .....	30-11
45 through 49000 Series .....	30-28

## K

Keys and Locks .....	00-6
Knuckle, Steering	
43-44000 Series .....	30-11
45 through 49000 Series .....	30-28

Subject	Page No.	Subject	Page No.
<b>L</b>		<b>N</b>	
Light Bulb Charts . . . . .	120-29	Neutral Start Switch Adjustment . . . . .	120-19
Lighting System Specifications . . . . .	120-33	<b>O</b>	
Lock Cylinder, Ignition . . . . .	00-6	Oil Filter, Engine . . . . .	00-17
Lubrication		Oil Flow Circuits	
Engine Oil Change Interval . . . . .	00-16	Turbo Hydramatic 350 . . . . .	75-36
Oil Viscosity Chart . . . . .	00-16	Turbo Hydramatic 400 . . . . .	76-36
Fluid Capacities . . . . .	00-23	Oil Pan, Engine—350, 455 . . . . .	60-66
Points, Body . . . . .	00-19	Oil Pressure Checks	
Emission Control . . . . .	00-17	Turbo Hydramatic 350 . . . . .	75-16
Lubrication System		Turbo Hydramatic 400 . . . . .	76-7
L-6 Engine . . . . .	60-7	Oil Pump—Engine	
350, 455 Engines . . . . .	60-51	L-6 Engine . . . . .	60-7
<b>M</b>		350, 455 Engines . . . . .	60-51
Mainshaft Assembly Manual Trans.		Oil Pump Transmission	
43-44000 Series 3-Speed . . . . .	72-68	Turbo Hydramatic 350 . . . . .	75-66
3-Speed 45-46000 and Estate Wagon . . . . .	72-45	Turbo Hydramatic 400 . . . . .	76-67
4-Speed 43-44000 . . . . .	72-25	Oil Recommendations—Engine . . . . .	00-16
Manifold		Oil Strainer—Transmission	
Intake		Turbo Hydramatic 350 . . . . .	75-55
L-6 Engine . . . . .	60-10	<b>P</b>	
350, 455 Engines . . . . .	60-51	Paint Color Code Chart . . . . .	00-12
Exhaust		Parking Brake . . . . .	50-9
L-6 Engine . . . . .	60-10	P.C.V. System Description . . . . .	64-9
350, 455 Engines . . . . .	60-51	P.C.V. System Test . . . . .	64-9
Manual Steering Gear Diagnosis . . . . .	90-3	Piston, Pin, Rings	
Manual Steering Gear Adjustment . . . . .	90-5	L-6 Engine . . . . .	60-28
Manual Steering Gear Disassembly . . . . .		350, 455 Engines . . . . .	60-71
and Reassembly . . . . .	90-6	POA Valve Removal and Installation . . . . .	13-18
Manual Steering Gear Removal . . . . .		Power Flow—Manual Transmission	
and Installation . . . . .	90-5	43-44000 Series 4-Speed . . . . .	72-34
Manual Transmission		3-Speed 43-44000 Series . . . . .	72-18
Clutch Specifications . . . . .	71-15	3 Speed 45-46000 and Estate Wagon . . . . .	72-41
Max-Trac		Power Steering Gear Adjustment . . . . .	90-27
Model Designation (Body Style) . . . . .	00-10	Power Steering Gear Service Prodecures . . . . .	90-27
Model Designations—Transmission		Power Steering Pump Service Procedures . . . . .	90-40
Turbo Hydramatic 350 . . . . .	75-117	Power Steering System Trouble Diagnosis . . . . .	90-12
Turbo Hydramatic 400 . . . . .	76-127	Propeller Shaft	
Mountings, Body		All Series . . . . .	40-40
43-44000 Series . . . . .	20-3	Pump, Oil—Engine	
45 46 48 49000 Series . . . . .	20-9	L-6 Engine . . . . .	60-7
Mountings—Engine		350, 455 Engines . . . . .	60-51
L-6 Engine . . . . .	60-34	Push Button Adjustment Radio . . . . .	129-7
350, 455 Engines . . . . .	60-82	<b>R</b>	
Mountings, Radiator		Radio	
43-44000 Series . . . . .	130-3	Antenna Trimmer Adjustment . . . . .	129-6
45-46-48000 Series . . . . .	130-8		
49000 Series . . . . .	130-13		
Muffler Removal and Installation			
(Air Cond.) . . . . .	13-17		

Subject	Page No.
Push Button Adjustment .....	129-7
Removal and Installation .....	129-7
Information Drawings .....	129-10
Noise Suppressors .....	129-5
Trouble Diagnosis .....	129-2
Range Check and Adjustment (ACC) .....	13-105
Rear Servo	
Turbo Hydramatic 400 .....	76-84
Rear Window Defroster Wiring	
Diagram .....	120-143
Receiver—Dehydrator Removal and	
Installation .....	13-17
Rings, Piston	
L-6 Engine .....	60-28
350, 455 Engines .....	60-71
Rochester MV	
Specifications .....	64-76
Operation .....	64-63
Adjustment .....	64-69
Rochester 2GV	
Specifications .....	64-39
Operation .....	64-28
Adjustment .....	64-33
Rochester 4MV	
Specifications .....	64-59
Operation .....	64-42
Adjustment .....	64-50
Rocker Arm Assembly	
L-6 Engine .....	60-20
350, 455 Engines .....	60-62

**S**

Sensor R. & R., C.C.S. ....	67-6
Sequence for Transmission Diagnosis	
Turbo Hydramatic 350 .....	75-4
Turbo Hydramatic 400 .....	76-4
Service Procedures Clutch	
43-44-45000 Series .....	71-5
Turbo Hydramatic 350 & 400	
(Console Shift)	
43-44-49000 Series .....	73-3
Turbo Hydramatic 350 & 400	
All Series .....	73-7
3-Speed Manual Transmission	
43-44000 Series .....	73-12
3-Speed Manual Transmission	
45-46000 Series .....	73-16
Shock Absorber, Rear	
All Series .....	40-2
Side Cover Assembly	
3-Speed Manual Transmission	
43-44000 Series .....	72-13
4-Speed Manual 43-44000 Series .....	72-29

Subject	Page No.
Signal System Specifications .....	120-43
Spark Knock Complaints .....	64-4
Spark Plug	
Specifications .....	68-32
Clean & Adjust .....	68-28
Installation .....	68-28
Wires .....	68-27
Specifications	
Engine	
L-6 Engine .....	60-37
350, 455 Engines .....	60-84
Front Wheel Alignment	
43-44000 Series .....	30-7 and 30-18
45 through 49000 Series .....	30-24 and 30-36
Speedometer	
Description .....	120-91
Buzzer Operation .....	120-91
Trouble Diagnosis .....	120-80
Cable Installation .....	120-86
Quick Connect .....	120-83
Spring	
Rear Suspension	
All Series .....	40-5
Front Suspension	
43-44000 Series .....	30-15
45 through 49000 Series .....	30-31
Starting Motor	
Specifications .....	68-11
Repairs .....	68-9
Solenoid Test .....	68-3
Bench Test .....	68-5
Operation .....	68-5
Wiring Diagrams .....	68-12
Trouble Diagnosis .....	68-3

Steering	
Geometry (Turning Angle)	
43-44000 Series .....	30-19
45 through 49000 Series .....	30-38
Knuckle	
43-44000 Series .....	30-11
45 through 49000 Series .....	30-28
Steering Columns All Series .....	90-48
Steering Linkage .....	90-75
Stereo Tape Player All Series .....	129-17
Suspension	
Front	
43-44000 Series .....	30-2
45 through 49000 Series .....	30-21
Rear .....	40-2

**T**

Tape Player, Stereo All Series .....	129-17
Thermo Vacuum Switch .....	67-3

Subject	Page No.	Subject	Page No.
Throttle Linkage Adjustment	64-8		
Throttle Linkage Description	64-5		
Timing Chain Cover			
L-6 Engine	60-25		
350, 455 Engines	60-77		
Timing Chain and Sprocket L-6 Engine	60-25		
350, 455 Engines	60-78		
Tires			
Inflation	100-14		
Rotation	100-17 and 100-11		
Sizes	100-13		
Transducer, Cruise Master	65-4		
Transmission Controlled Vacuum Advance System	67-3		
Transmission Reassembly			
3-Speed Manual			
43-44000 Series	72-10		
4-Speed Manual 43-44000 Series	72-30		
3-Speed Manual 45-46000 Series	72-47		
Transmission Removal and Installation			
3-Speed Manual 43-44000 Series	72-5		
3-Speed Manual 45-46000 and Estate Wagon	72-12		
4-Speed Manual 43-44000 Series	72-23		
Turbo Hydramatic 350	75-56		
Turbo Hydramatic 400	76-56		
Trim Height			
All Series	40-8		
Trouble Diagnosis			
Manual Steering Gear	90-3		
Turbo Hydramatic 350	75-4		
Turbo Hydramatic 400	76-4		
43-44000 Series			
3-Speed Manual	72-3		
3-Speed Manual 45-46000 and Estate Wagon	72-38		
4-Speed Manual 43-44000 Series	72-21		
43-44-45-46000 Series Clutch	71-3		
Tune Up Procedure	69-3		
Turn Signal			
Operation	120-42		
Trouble Diagnosis	120-39		
Wiring Diagram	120-44		
Twilight Sentinel	150-6		
		<b>U</b>	
		Universal Joints	
		All Series	40-46
		<b>V</b>	
		Vacuum Modulator	
		Turbo Hydramatic 350	75-5
		Turbo Hydramatic 400	76-53
		Vacuum Motor Service, C.C.S.	67-3
		Valve Body Transmission	
		Turbo Hydramatic 350	75-55
		Turbo Hydramatic 400	76-85
		Valve Lifters	
		L-6 Engine	60-17
		350, 455 Engines	60-63
		Valve and Seat Reconditioning—Engine	
		L-6 Engine	60-16
		350, 455 Engines	60-60
		Vinyl Top Color Code Chart	00-12
		<b>W</b>	
		Water Pump—Engine	
		L-6 Engine	60-12
		350, 455 Engines	60-57
		Wheels and Tires	100-2
		Wheel Alignment	
		43-44000 Series	30-7 and 30-18
		45 through 49000 Series	30-24 and 30-36
		Wheel Bearing, Adjustment Front	30-10
		Windshield Wiper	
		Service Procedures (R & R)	10-3
		Refer to 1971 Fisher Body Manual for:	
		Diagnosis	
		Description and Operation	
		Repair Procedures	
		Specifications	
		Wiper & Transmission Down Shift	
		Wiring Diagrams	
		43-44000	120-144
		45-46-48-49000 Series	120-147
		Wiring Diagrams—Complete Colored	
		43-44000	120-151
		45-46-48-49000	120-152